





## Removing the G Key Assembly

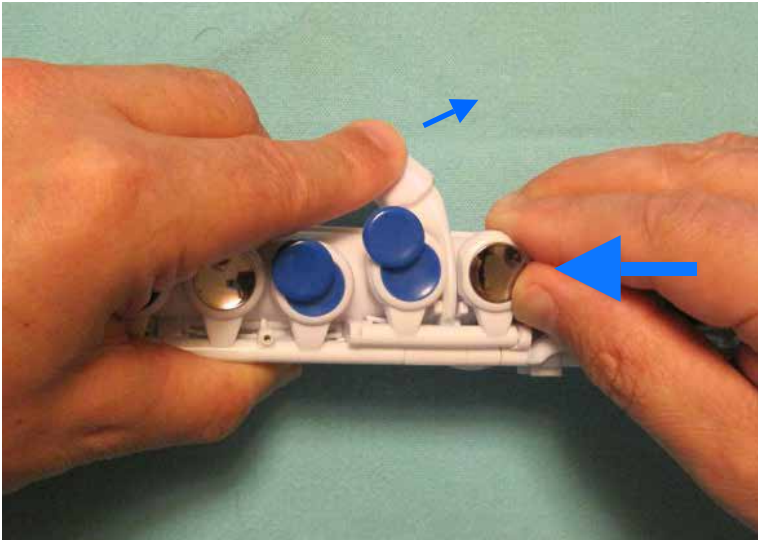

Hold the flute securely as shown. Depress the G# key with the left index finger. With the right hand, lift the key up and push very firmly to the left. The key will bend so that it can be released from its axle location hole on the right side. See next image.

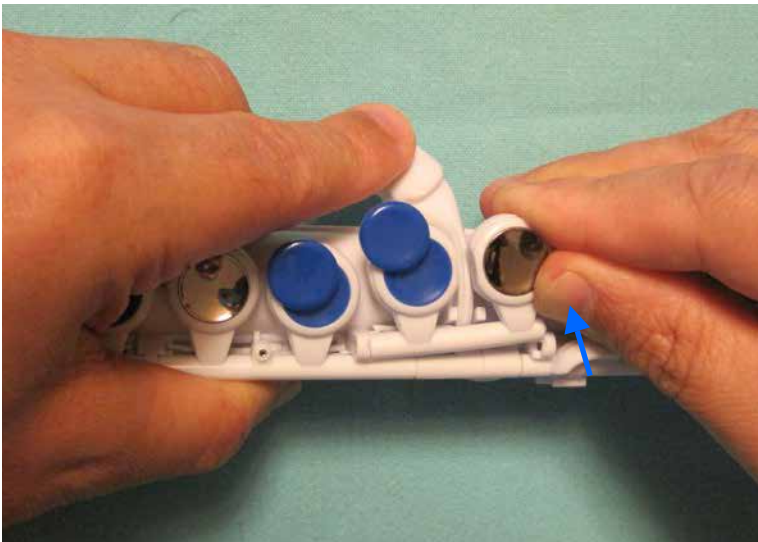

Don't worry about the key bending. It will not be permanently deformed and will snap back into position easily when you are ready to reassemble. Take care to make sure the spring is in the correct position during assembly.