





Removing Trill Key Rod Assembly

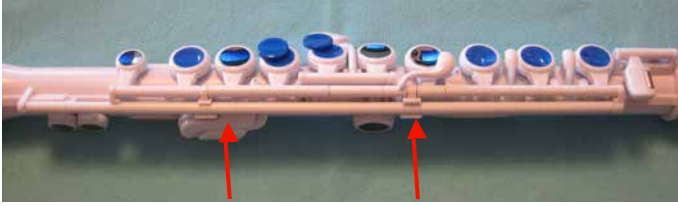


To remove the trill key rod, bend the rod gently so that it snaps out of the two clips indicated by the red arrows.

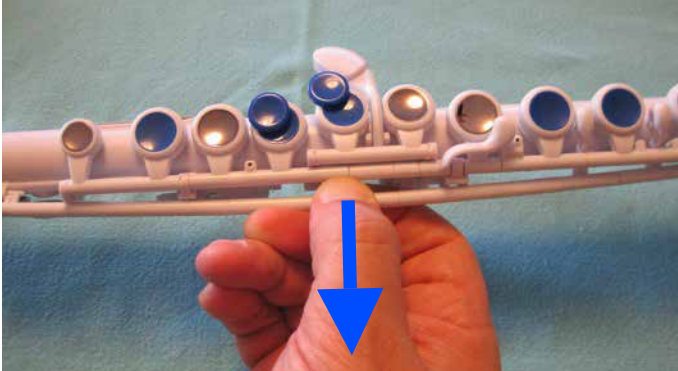

Pull firmly towards you. As you can see the rod will bend but don't worry. It will not be damaged.



Now pull more firmly towards you so that the left hand end of the rod comes out of its seating, marked by the red arrow. The long key will be released from the left hand end and can now be removed from the instrument.

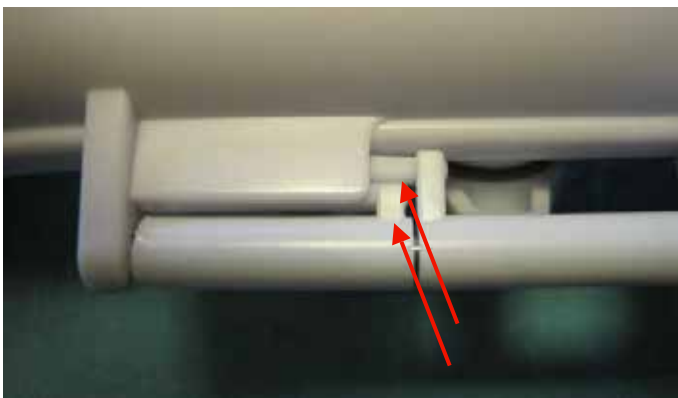

To return the long key to its correct position, simply reverse the above procedure paying particular attention to the springs which must be positioned as shown for the key to function correctly.